

INSTALLATION MANUAL

YAMAHA > **AEROX 155** > **TG302-301TR**



TG302-301TR

Disassemble & Installation

! ENSURE BIKE IS ON STANDS AND SECURE BEFORE REMOVING SHOCK.



1. REMOVE THE UPPER BOLTS OF OEM SHOCK ABSORBER BY USING SOCKET NO.14 AND LOOSEN LOCK BY THE WRENCH NO.12



2. REMOVE THE LOWER BOLTS BY USING SOCKET NO.14



3. REMOVE THE SHOCK ABSORBER



4. INSTALL THE SHOCK ABSORBER AND TIGHTEN THE BOLTS BY USING THE SOCKET NO.14

Disassemble & Installation




5. REMOVE THE EXHAUST BY USING THE SOCKET NO.14



6. REMOVE ANOTER BOLTS




7. REMOVE THE UPPER BOLTS BY USING THE SOCKET NO.14 AND LOOSEN LOCK BY THE WRENCH NO.12

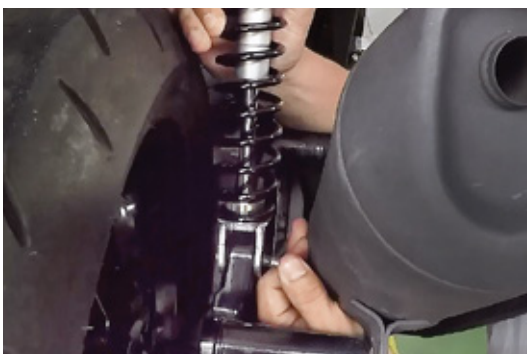

8. REMOVE THE SHOCK ABSORBER



9. INSTALL THE SHOCK ABSORBER

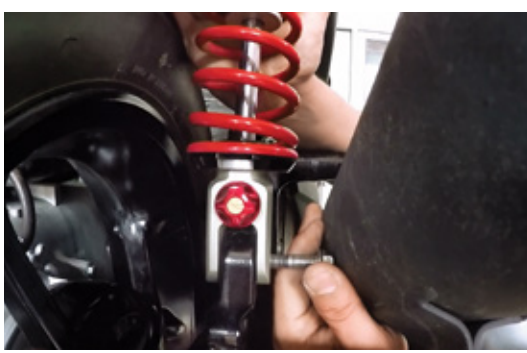

10. MOUNT AND TIGHTEN THE LOWER BOLTS BY USING THE SOCKET NO.14

Disassemble & Installation



11. MOUNT AND TIGHTEN THE UPPER BOLTS BY USING THE SOCKET NO.14 AND LOOSEN LOCK BY THE WRENCH NO.12



12. INSTALL THE EXHAUST BLACK

Note

WHEN FINISHED INSTALLATION, THE RIDER SHOULD TEST RIDE AND SET UP SUITABLE SETTING FOR THE RIDER

How to Adjust



HOW TO ADJUST SPRING PRELOAD

SPRING PRELOAD IS FOR ADJUSTING THE HEIGHT OF THE BIKE THE TECHNICIAN HAVE TO UNLOCK TREAD PRELOAD BY USING HEX WRENCHES 3 mm. AFTER THAT USE WRENCH TO LOOSEN OR TIGHTEN THE SPRING PRELOAD



HOW TO ADJUST REBOUND

REBOUND IS TO CONTROL THE FAST / SLOW MOVEMENT. THE TECHNICIAN CAN ADJUST THE REBOUND KNOB.